•

FUSE

STD DWG

AT 1

SEE DETAIL "X" ON SHEET "Y"

X-Y(Z)X=QUANTITY Y=WIRE SIZE (AWG) Z=PURPOSE